



<u>Item No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Quantity</u>
1	53-917	Pre-Formed 3/4 In Pipe	1
2	53-815	Coupling 3/4 In Slip x Thread PVC	1
3	52-280	Elbow 3/4 In x 90° Thread x Thread PVC	1
4	53-906	Pipe Nipple 3/4 In x 6 In PVC	1
5	11-402	Air Gap Holder, Fold Down Style	1
6	55-101	Adapter 3/4 MPT x 3/4 In FGHT	1
7	55-050	Rubber Washer 3/4 In	1
8	69-250	Knob 5/16 In NC	1
9	32-504	Bolt 3/8 x 1-1/3 In SS	2
10	42-503	Flat Washer 3/8 In SS	2
11	43-503	Lock Washer 3/8 In SS	2
12	41-503	Nut 3/8 In SS	2

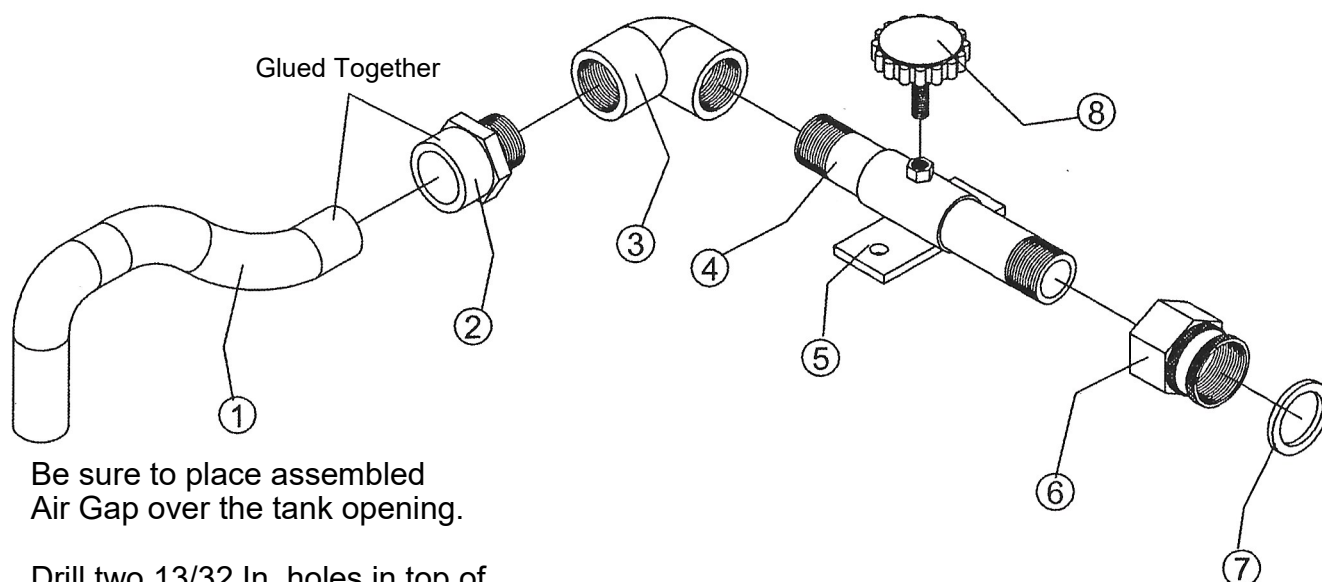

Be sure to place assembled Air Gap over the tank opening.

Drill two 13/32 In. holes in top of tank and attach assembled Air Gap as shown.

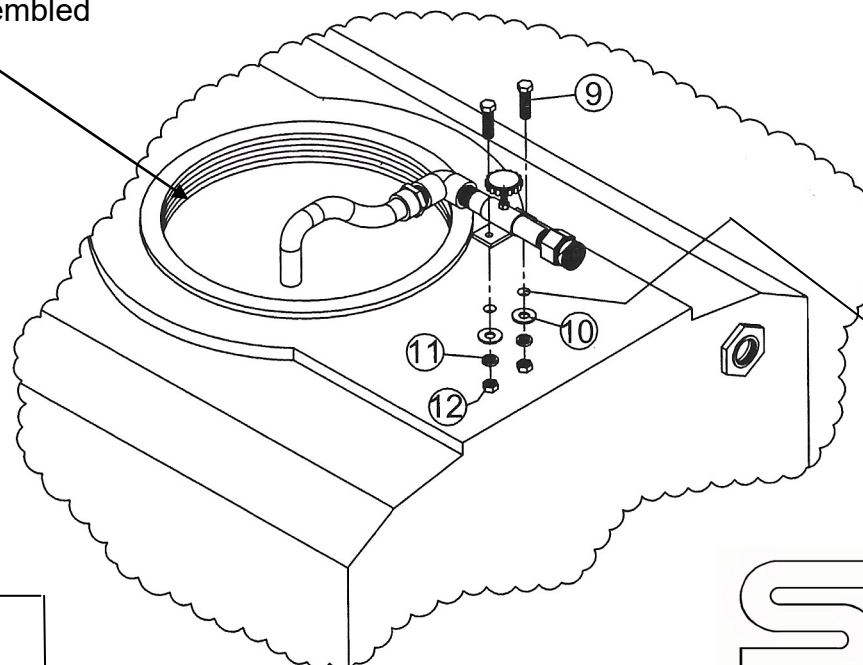

After exact placement of Air Gap has been determined, drill two 13/32 Inch holes in top of tank.

SDI Air Gap
Part No. 81-809

SDI
SPRAYING DEVICES INC.