


## Product/Service

Spraying Devices Inc.

# Turf Walker SC Assembly Instructions

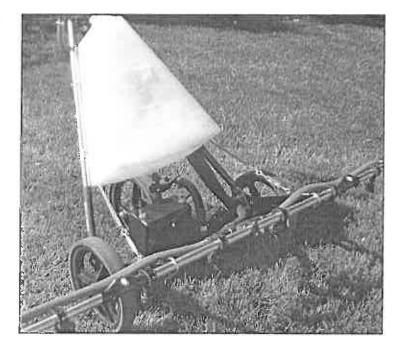

Congratulations on your purchase of the SDI *Turf Walker SC* self contained walking spray boom! We know you'll be delighted with your purchase and it will serve you well for many years.



After opening the box, remove the packing material and inspect for damage that might have occurred during shipping. You should have all the parts shown at left.

I) Move the frame tubing (#9 on drawing) to the upright position and insert the 3/8 x I 1/4" (#60) bolt into the lower hole on each side

Spraying Devices Inc.

PO Box 3107 Visalia, CA 93278-3107


Phone: 559-734-5555

Fax: 559-734-5591

sales@sprayingdevices.com


www.sprayingdevices.com

- 2) Install the wheels on the axle (#33) using the supplied bolts attaching the wheel with longest bolt in the center position. Be sure the magnet faces the speedometer pickup on the axle.
- 3) Attach the spray gun to the top of the frame tubing using the existing  $3/8 \times 11/4$ " bolt.

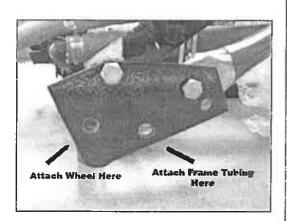

- 4) Move the boom mounting brackets (#34 & 35) into the forward position.
- 5) Attach the spray boom to the boom mounting brackets using the turnbuckles to adjust the height of the spray boom. The spray tips should be 10 inches above the ground. If you are unable to achieve the correct height you may need to remove chain links as needed.
- 6) Attach the hose to the spray gun, return hose to tank and hose to the spray boom.



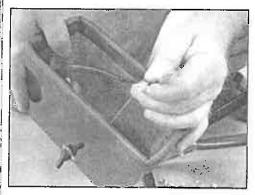


- 7) Remove the battery cover.
- 8) Install the battery using the supplied clamp and bolts to secure it to the axle. Connect the spade fittings inside the battery cover to the corresponding connections on the battery and feed the pump connect-or/recharging plug through the oval hole on the side of the cover.
- 9) Connect the charger and charge the battery for 8 hours on the initial charge. Confirm that the toggle switch is in the ON position for battery charging.

### Using Your Turf Walker SC

- After charging the battery for your initial test, first fill the tank with water.
- Confirm that the 3 way valve on the bottom of the tank is in the open position (handle is vertical).
- Start the pump by flipping the toggle switch to ON. Generally the pump will start for a few seconds then stop.
- · Fold down the boom in preparation for spraying.
- Move to the rear of the Turf Walker SC, grip the handle of the spray gun and squeeze the handle to start the spray. It may take a few seconds for the pump to prime and fill the hoses with water.
- When the spray starts to flow from the boom adjust your spray pressure by rotating the lever on the ball valve located by the spray gun. This valve also controls the return of material to the tank.
- We recommend premixing your spray solutions prior to adding them to the tank and not using the tank to mix your spray materials.

We are confident that following the above instructions for assembling and using your sprayer will get you off to a good start. If you have questions on assembly or the proper use of your equipment please contact your dealer.


Thank you for buying an SDI sprayer!

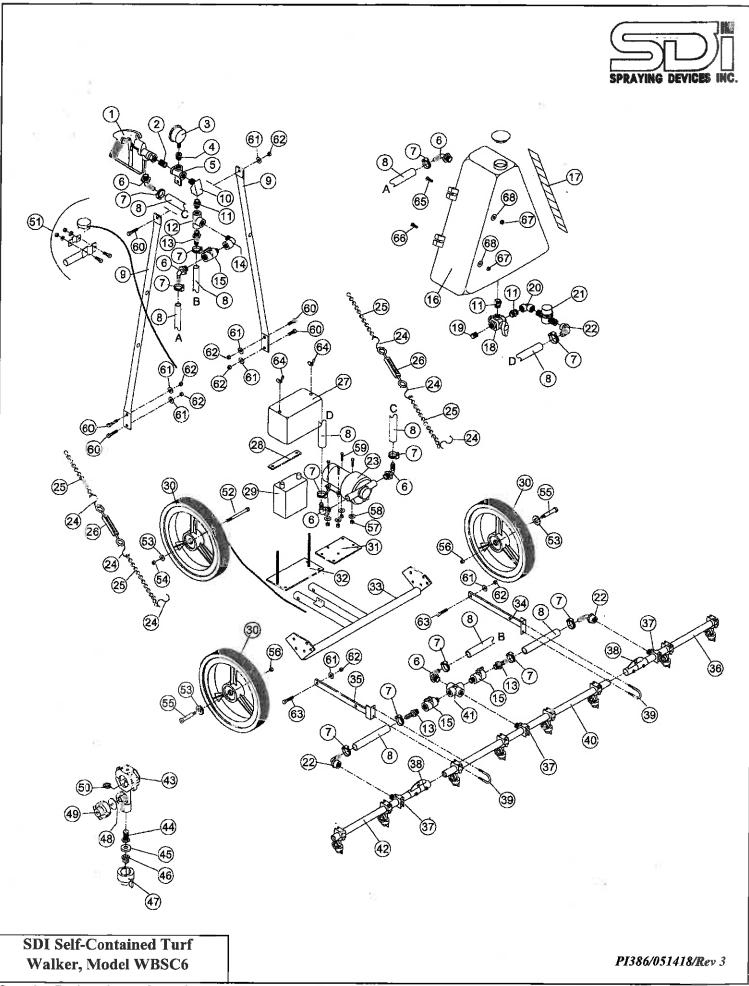

#### **WBSC6 Assembly Illustration**



#### Detail "A"

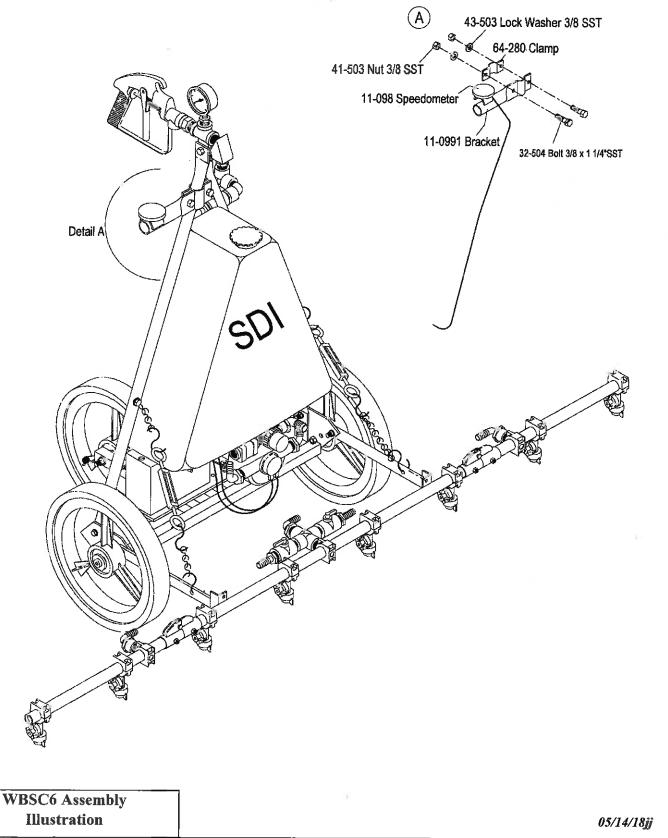


#### SDI Self-Contained Turf Walker Spray Boom WBSC6

item	Part		_
Number	Number	Description	
Number  1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32	WBSC6 64-043 51-401B 27-060 50-460B 11-071 52-111 24-106SS K1136-1/2 11-072 50-412B M1200P TEE050 53-094 SE12-P LV050MTV 15-013 70-035 AA343M-3-1/2-PP 53-884 EL050-P 3350-0079A 53-091 5537-2E1-63B 69-238 69-910 69-288 15-095 11-0681 79-050 80-030 11-0684 11-0685	Self-Contained Turf Walker Spray Boom Spray Gun Close Nipple 1/2 In Brass Liquid Filled Gauge 0-60psi Bushing 1/2 x 1/4 In Brass Tee Elbow Adapter 1/2 MPT x 1/2 In HB Poly Hose Clamp Spray Hose 1/2 PVC Blue 300psi Per Ft. Tubing Frame Street Elbow 45° 1/2 In Brass Nipple 1/2 In MPT Poly Tee 1/2 In FPT Poly Adapter 90° 1/2 MPT x 1/2 In HB Poly Street Elbow 90° 1/2 MPT x 1/2 In FPT Micro Valve 1/2 Female x 1/2 In Male Poly Tank with Mounting Tabs Sight Gauge Decal Ball Valve Assembly 3-Way Poly Plug 1/2 In NPT PVC Elbow 90° 1/2 x 1/2 In Strainer W/50 Mesh Screen Poly Elbow Adapter 1/2 FPT x 1/2 In HB Poly Pump 5.3 GPM 60psi 12V S-Hook 1-1/2 In Chain Steel Sash Per Ft. Turnbuckle 3/16 x 2-7/8 In Battery Box Battery Hold Down Sealed 12V Battery W/79-051 Charger Tire 12 In W/3 Spoke Wheel and 2 In Hub Pump/Motor Mount Battery Mount	Qty.  1 1 1 1 6 12 Specify 2 1 3 1 1 1 1 3 1 8 Specify 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
31 32 33 34 35 36 37	11-0684 11-0685 11-069 11-073L 11-073R 51-416 52-418	Pump/Motor Mount Battery Mount Axle Left Mounting Bracket Tube to Axle Right Mounting Bracket Tube to Axle Left Boom Tube Pipe Saddle Assembly	1 1 1 1 1
38 39 40 41 42 43 44 45 46	11-471 47-103 51-415 CR050 51-417 64-411 64-403 64-404 64-643	Boom Pipe Hinge U-Bolt 1/4 x 1-1/4 x 2-1/4 In Center Boom Tube Cross 1/2 In FPT Right Boom Tube Single Nozzle Body W/Check Valve Strainer Screen Nylon Rubber Washer Tip TP8003VP Poly	3 2 2 1 1 1 8 8 8

### SDI Self-Contained Turf Walker Spray Boom WBSC6

Item	Part		
Number	Number	Description	Qty.
47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68	64-406 64-414 64-415/20 64-416 81-073 34-119 42-104 41-514 48-047 41-513 41-101\$\$ 31-104\$\$ 32-504 43-503 41-503 32-503 41-502W 31-007 31-008 41-511 42-501  52-588 72-122 72-900	Black Cap Diaphragm Check Valve 20psi O-ring Speedometer Kit Hex Bolt 1/2 x 5 In Flat Washer 1/2 In Lock Nut 1/2 In Shoulder Bolt Socket 1/2 x 2-1/4 In Lock Nut 3/8 In Hex Nut 1/4 In NC Lock Washer 1/4 In Hex Bolt 1/4 x 1-3/4 In Hex Bolt 3/8 x 1-1/4 In Lock Washer 3/4 In Hex Nut 3/8 In Hex Nut 3/8 In Hex Nut 3/8 In Hex Cap Screw 1/4 NC x 2 In Cap Screw 1/4 In NC x 2-1/4 In Lock Nut 1/4 In Flat Washer 1/4 In Flat Washer 1/4 In Stem not illustrated: Tube Plug Switch Boot Switch Battery/Pump	8 8 8 8 1 1 4 1 2 2 10 10 10 5 5 5 2 2 2 2 4 4 2 1 1
			05/1418jh



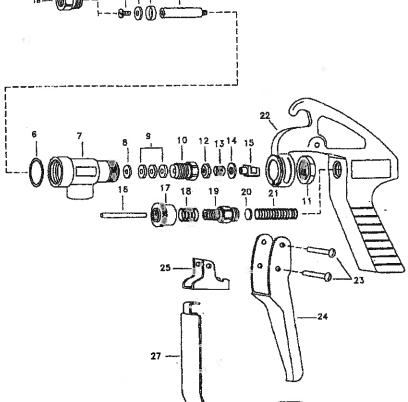

Item No	. Part No.	<u>Description</u>	<u>Oty</u>
1B	64-6866-1/2	#43C 1/2 Pipe Adapter	1
•2	N/A	32 x 3/8" Screw SS	6
3	64-6740-TEF	Teflon Seat Plate	1
•4	N/A	Seat Holder	1
•5	N/A	Stem, Type 416 SS	1
**6	Z-CP7079AL	Adapter Gasket, Aluminum	1
7	64-873	Inlet Body	1
#*8	Z-CP6601320SS	Packing Washer Type 302 SS	1
•9	N/A	Leather Packing	3
**10	Z-CP19237	Packing Screw	_1
**11	Z-CP6599	Lock Nut, Brass	1
•12	N/A	Washer Type 302 SS	1
•13	N/A	Trigger Stop Spring SS	1
•14	N/A	Washer Steel Zinc Plated	1
**15	Z-CP6597INP	Steel Trigger Guide Nickel Plated	1
**16	Z-CP6591SS	Spring Stud SS	1
**17	Z-6589IZP	Steel Stop Adj Nut, Zinc Plated	1
**18	Z-CP6594SS	Spring for Stop Adj Nut, SS	1
**19	Z-CP6588IZP	Steel Spring Screw, Zinc Plated	1
20	CP6592-302SS	Spring Guide Washer Type 302 SS	1
**21	Z-CP65931SS	Main Spring for 43-L SS	1
**22	Z-CP144771AL	Handle Body, Aluminum	1
23	CP76231-IZP	Steel Rivet, Zinc Plated	2
**24		Steel Trigger, Zinc Plated	1
	Z-CP6510INP	Steel Trigger Stop, Nickel Plated	1
	Z-CP11757INP	Steel Screw, Nickel Plated	1
**27	Z-CP13798INP	Steel Trigger Guard, Nickel Plated	1

CP19268-SS/Kit Form Only #64-567

CP6863/Kit Form Only #64-567 CP68640416SS/Kit Form Only #64-567

CP6602-LEA/Kit Form Only #64-567

CP7709-302SS/Kit Form Only #64-567 CP6595SS/Kit Form Only #64-567 CP7991-IZP/Kit Form Only #64-567

•Indicates parts available only in Repair Kit SDI Part #64-567

\*\*Indicates parts available by special order only and are non-returnable. Delivery time approximately 10 working days after receipt of order.

Spray Gun for Turf Walkers SDI Part No. 64-043

PI112/117/jh