
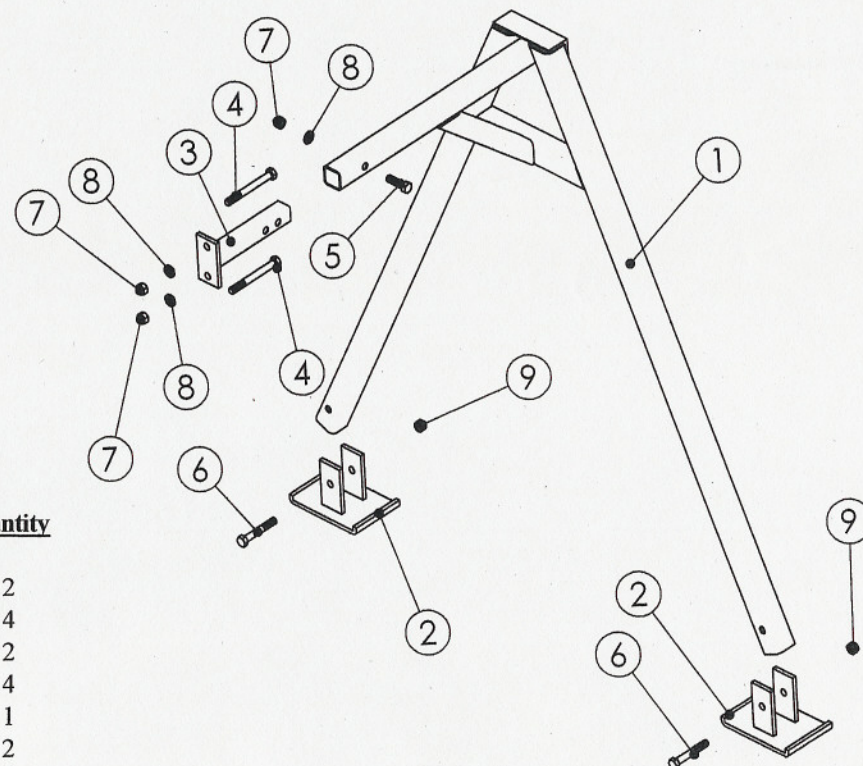
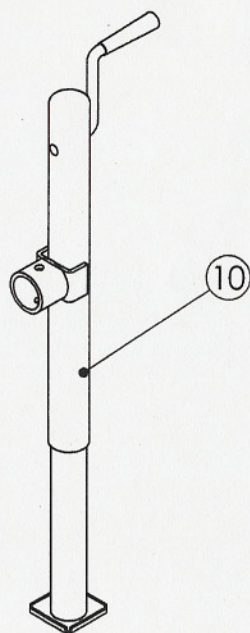


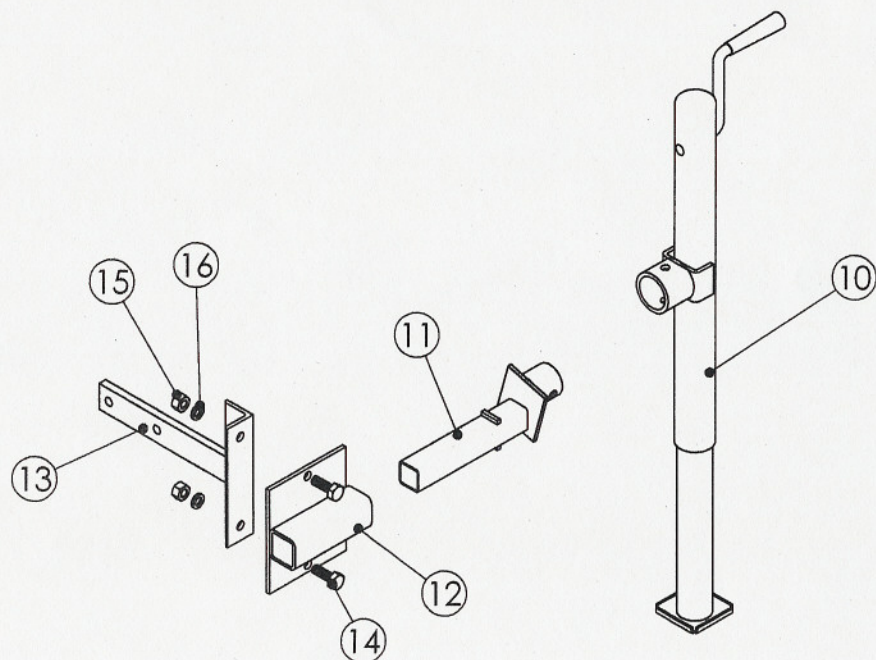


<u>Item No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Quantity</u>
1	11-463	Storage Stand, Side Mount	2
2	11-464	Storage Stand, Foot	4
3	11-463	Storage Stand, Frame Attach.	2
4	32-504	Hex Bolt 3/8 x 1-1/4" SST	4
5	32-506	Hex Bolt 3/8 x 1-3/4" SST	1
6	32-509	Hex Bolt 3/7 x 1-1/2" SST	2
7	41-503	Hex Nut 3/8" SST	6
8	43-503	Lockwasher 3/8" SST	6
9	41-513	Locknut 3/8" SST	4
10	80-208	Jack Stand	2
11	11-469	Boom Mount for Jack Stand	2
12	11-771	Rear Support	2
13	11-768	Lift to Truck Mount	2
14	34-104	Hex Bolt 1/2 x 1-1/4"	4
15	41-104	Hex Nut 1/2"	4
16	43-104	Lock Washer 3/8" SST	4

SDI Quick Stand
Part No.
81-QSLB

Mounting Instructions for 81-QSLB

For use of quickstands on a utility vehicle without a spray boom

1. Install frame mounting bracket to the sprayer frame using the existing holes and hardware supplied.
2. Install quickstand adapter to the mounting bracket.
3. Slide jack mounting bracket to adapter.
4. Complete installation using the instructions for mounting onto a spray boom.

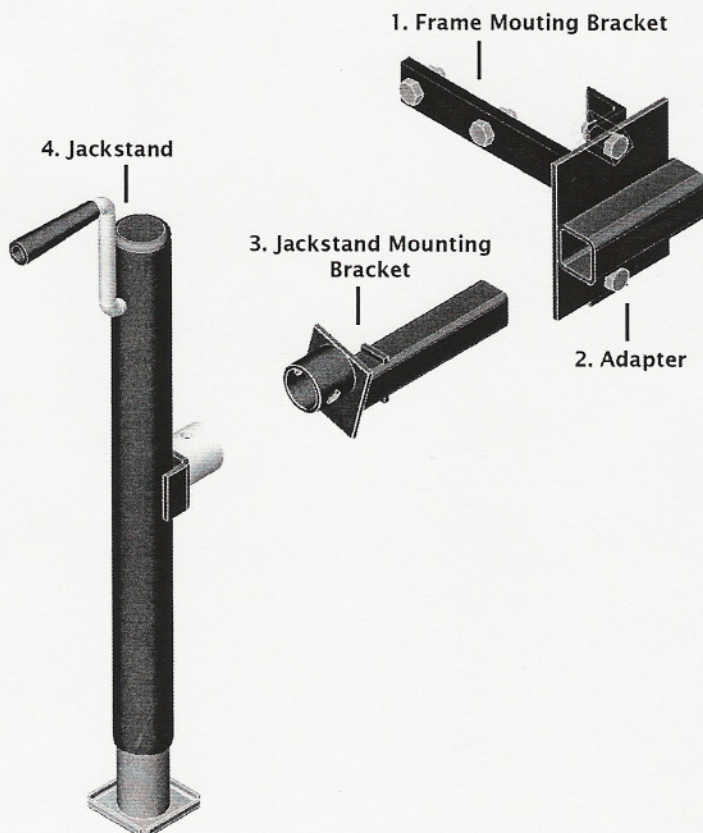

SDI
SPRAYING DEVICES, INC.
04/05.sc