


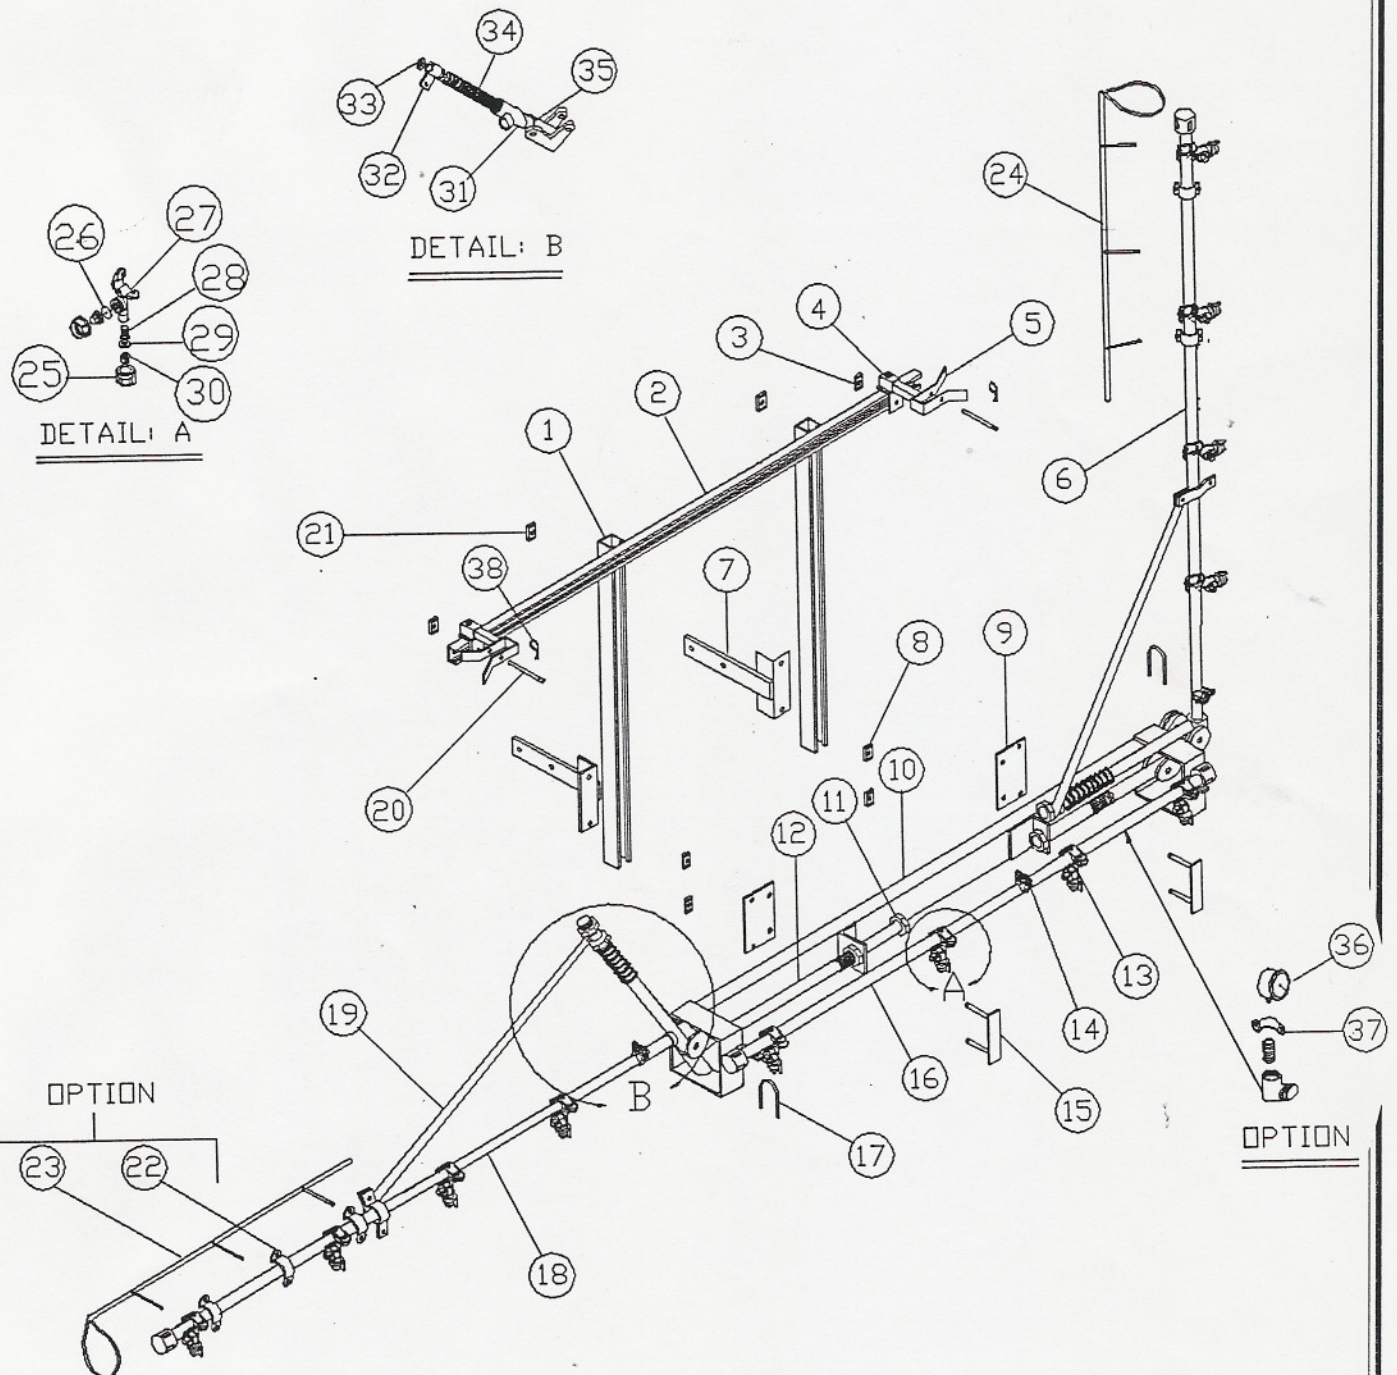

SDI "Wet" Booms - Models
SBE-M 20/20-1
SBE-M 15/10-1 SBE-M 15/20-1

100/1097eh

SDI (S.B.E.-M) Wet Boom Assemblies - After 10-1-97

Item Number	Part Number	Description	QTY
	SBE-M 20/20-1	20' Wet Boom, 12 Nozzles, 20" Centers	
	SBE-M 15/10-1	15' Wet Boom, 18 Nozzles, 10" Centers	
	SBE-M 15/20-1	15' Wet Boom, 9 Nozzles, 20" Centers	
1	11-212	Boom Upright	2
2	11-213	Cross Member	1
3	41-105	Adjusting Nut- 5/16"	2
4	11-214	Boom Rest Bracket	2
5	11-218	Bom Rest	2
6	51-574R	Boom Pipe- Right (for SBE-M20/20-1 Only)	1
6	51-555R	Boom Pipe- Right (for SBE-M15/10-1 Only)	1
6	51-555R	Boom Pipe- Right (for SBE-M15/20-1 Only)	1
7	11-215	Boom Mounting Bracket	2
8	41-110	Adjusting Nut- 1/2"	4
9	11-217	Back Up Plate	2
10	11-290	Boom Mounting Tube (SBE-M20/20-1 Only)	1
10	11-291	Boom Mounting Tube (for SBE-M15/10-1 & SBE-M15/20-1)	1
11	41-107	Hex Nut- 7/8" NC	4
12	11-297	Tube- 6 1/2" S.S.	2
13	64-397	Nozzle (for SBE-M20/20-1 Only)	12
13	64-397	Nozzle (for SBE-M15/10-1 Only)	18
13	64-397	Nozzle (for SBE-M15/20-1 Only)	9
14	52-410	Pipe Saddle- Brass	3
15	11-063	Boom Tube Clamp	2
16	51-568	Boom Pipe- Center (for SBE-M20/20-1 Only)	1
16	51-547	Boom Pipe- Center (for SBE-M15/10-1 & SBE-M15/20-1)	1
17	47-103	U Bolt	2
18	51-574L	Boom Pipe- Left (for SBE-M20/20-1 Only)	1
18	51-555L	Boom Pipe- Left (for SBE-M15/10-1 Only)	1
18	51-550L	Boom Pipe- Left (for SBE-M15/20-1 Only)	1
19	11-299	Boom Support Pipe	2
20	80-105	Pin- 5/16" x 1 7/8"	2
21	41-106	Adjusting Nut- 3/8"	2
22	64-280	Split Eyelet Clamp(Use W/Nozzle Guard)	12
23	11-091	Nozzle Guard- Left (Option)	1
24	11-090	Nozzle Guard- Right (Option)	1
25	64-406	Cap, Black (for SBE-M20/20-1 Only)	12
25	64-406	Cap, Black (for SBE-M15/10-1 Only)	18
25	64-406	Cap, Black (for SBE-M15/20-1 Only)	9

SDI (S.B.E.-M) Wet Boom Assemblies - After 10-1-97

Item Number	Part Number	Description	QTY
26	64-631	Diaphragm (for SBE-M20/20-1 Only)	12
26	64-631	Diaphragm (for SBE-M15/10-1 Only)	18
26	64-631	Diaphragm (for SBE-M15/20-1 Only)	9
27	64-411	Split Eyelet Check Valve(SBE-M20/20-1 Only)	12
27	64-411	Split Eyelet Check Valve(SBE-M15/10-1 Only)	18
27	64-411	Split Eyelet Check Valve(SBE-M15/20-1 Only)	9
28	64-403	Strainer Screen (for SBE-M20/20-1 Only)	12
28	64-403	Strainer Screen (for SBE-M15/10-1 Only)	18
28	64-403	Strainer Screen (for SBE-M15/20-1 Only)	9
29	64-404	Washer (for SBE-M20/20-1 Only)	12
29	64-404	Washer (for SBE-M15/10-1 Only)	18
29	64-404	Washer (for SBE-M15/20-1 Only)	9
30	64-533	Tip, XR8003VS (for SBE-M20/20-1 Only)	12
30	64-533	Tip, XR8003VS (for SBE-M15/10-1 Only)	18
30	64-533	Tip, XR8003VS (for SBE-M15/20-1 Only)	9
30	64-573	Tip, XR8005VK (for SBE-M20/20-1 Only)	12
30	64-573	Tip, XR8005VK (for SBE-M15/10-1 Only)	18
30	64-573	Tip, XR8005VK (for SBE-M15/20-1 Only)	9
31	11-288	Breakaway Tube	2
32	11-299-1	Support Collar	2
33	47-109	Jam Nut- 1" NC	4
34	45-181	Tension Spring	2
35	11-287	Boom Hinge	2
36	27-100	Pressure Gauge, 0-100 PSI (Option)	1
37	64-314	Split Eyelet Clamp- 3/4" x 1/4" (Option)	1
38	47-301	Hair Pin	2